



**Magnetic field sensor**  
**For detection of M6 weld nuts**  
**For Detection of Ferromagnetic Parts**  
**NIMFE-EM12/4.9L88-UP6X-H1141/S1182**

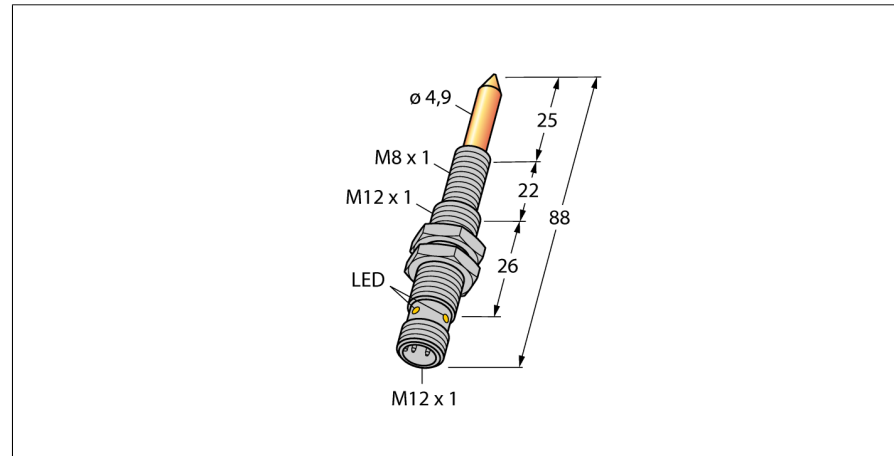

- Threaded barrel, M12 x 1
- Stainless steel, 1.4301
- DC 3-wire, 10...30 VDC
- NC/NO parametrizable with teach adapter VB2-SP1
- M12 x 1 male connector

**Wiring Diagram**

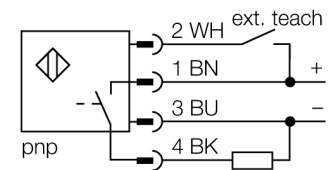


The weld sensors are available in different versions, with different signal intensities and diameters. Ferromagnetic parts which differ strongly in their material properties and diameters can thus be detected. A target part has to be located within the so called sensitive area in order to be detected. The internal sensor signal reaches the maximum intensity if the sensitive area is completely covered by the target. Partial coverage is also possible.

Sensitive area  $S = 9 \text{ mm}$

Within this area the sensor signal changes when components are connected.

Maximum range  $M = 13 \text{ mm}$


In case of complete coverage of the sensitive area the maximum signal intensity is achieved.

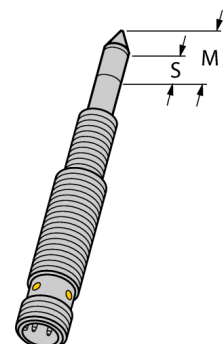

|   |  |
|---|--|
| <b>Type designation</b>                   | NIMFE-EM12/4.9L88-UP6X-H1141/S1182         |
| Ident no.                                 | 1600616                                    |
| <b>Ambient temperature</b>                | -25...+70 °C                               |
| <b>Operating voltage</b>                  | 10...30 VDC                                |
| Residual ripple                           | ≤ 10 % $U_{s}$                             |
| DC rated operational current              | ≤ 100 mA                                   |
| No-load current $I_0$                     | ≤ 15 mA                                    |
| Residual current                          | ≤ 0.1 mA                                   |
| Isolation test voltage                    | ≤ 0.5 kV                                   |
| Short-circuit protection                  | yes/ Cyclic                                |
| Voltage drop at $I_s$                     | ≤ 1 V                                      |
| Wire breakage/Reverse polarity protection | yes/ Complete                              |
| Output function                           | 3-wire, Connection programmable, PNP       |
| <b>Design</b>                             | Threaded barrel, M12 x 1                   |
| Dimensions                                | 88 mm                                      |
| Housing material                          | Stainless steel, V2A (1.4301)              |
| Active area material                      | Stainless steel, V2A (1.4301), TIN coating |
| Max. tightening torque housing nut        | 10 Nm                                      |
| Electrical connection                     | Connectors, M12 x 1                        |
| Vibration resistance                      | 55 Hz (1 mm)                               |
| Shock resistance                          | 30 g (11 ms)                               |
| Protection class                          | IP67                                       |
| MTTF                                      | 874 years acc. to SN 29500 (Ed. 99) 40 °C  |
| Packaging unit                            | 1  |
| <b>Power-on indication</b>                | LED, Green                                 |
| Switching state                           | LED, Yellow                                |

**Magnetic field sensor  
For detection of M6 weld nuts  
For Detection of Ferromagnetic Parts  
NIMFE-EM12/4.9L88-UP6X-H1141/S1182**



examples of use

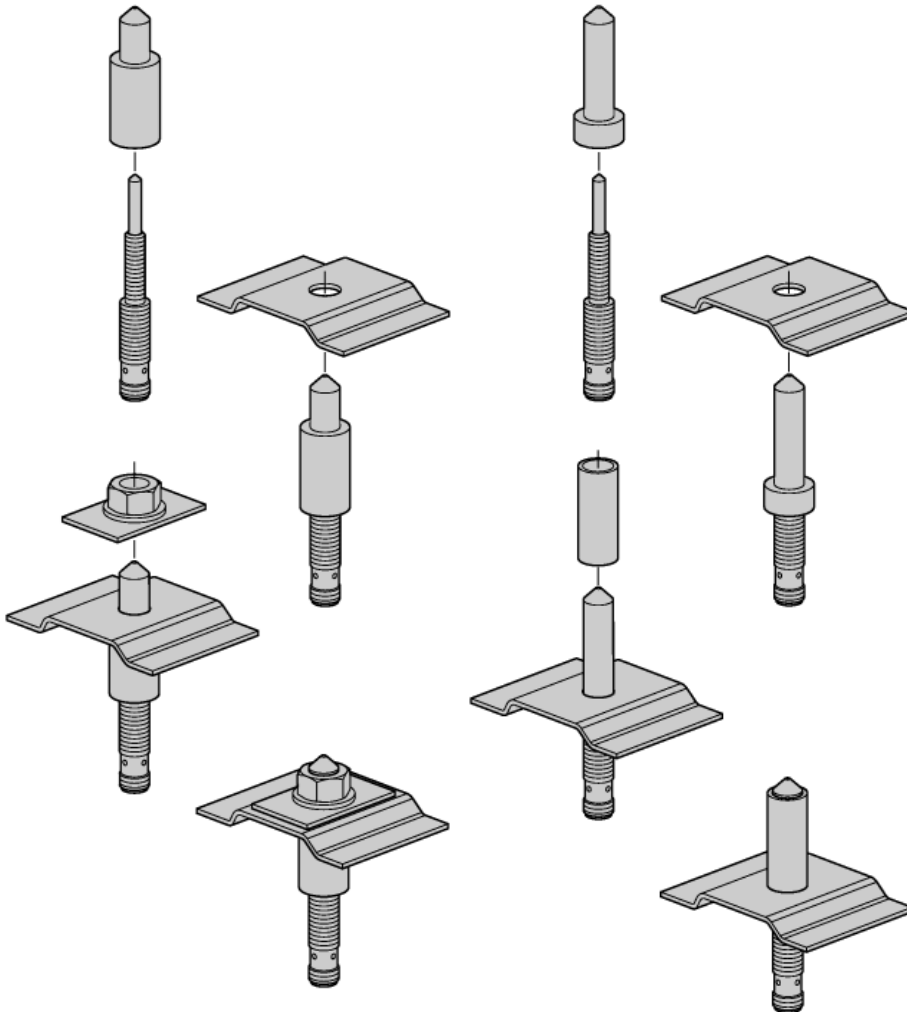

The magnetic field sensor for detection of ferromagnetic parts is especially suited for the detection of welding nuts as well as spacer or restraining sleeves. The parts have to be made of ferromagnetic material in order to guarantee correct performance. Most applications need center bolts to retain the welding nuts and restraining sleeves and thus provide mechanical protection of the sensors. These bolts have to be made of non-ferromagnetic material, like stainless steel for example. Center bolts are not available at Turck, as these have to be individually produced for and adjusted to the correspondent application.

**Magnetic field sensor  
For detection of M6 weld nuts  
For Detection of Ferromagnetic Parts  
NIMFE-EM12/4.9L88-UP6X-H1141/S1182**

Parameterisation with the teach adapter:

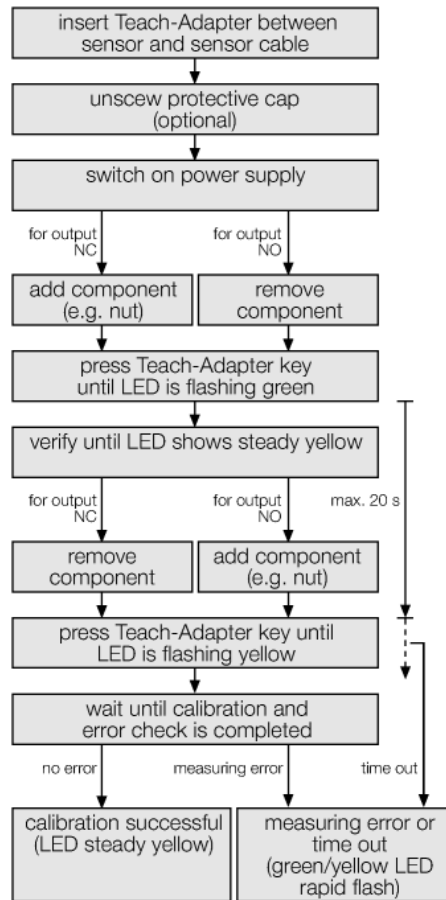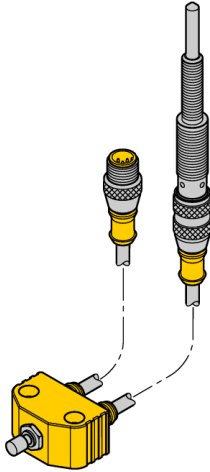

The measuring signal in the sensor is influenced by the diameter and the material characteristics of the center bolt, but also by the cover of the sensitive area. Therefore each sensor has to be conditioned to the operating environment, i.e. to the applied sleeves or protective caps and the target (nut, sleeve etc.) In order to calibrate a sensor, the teach adapter VB2-SP1 made by Turck is needed.

**Error display**

If the output is in switch-on state and the error messages 'overload' i.e. 'short circuit' are signaled, the output is immediately switched off. Within one second the sensor checks if the state of short circuit still remains, if not, the output is switched-on again. The states of 'overload' or 'short circuit' are signaled yellow by the LED with 1 Hz. Each sensor monitors the internal signals and hardware components. The output is switched-off by the following errors:

- Interruption of the sensor signal (e.g. by a magnetic field)
- Excess temperature (internal device temperature >100°C)
- Defective hardware

Sensor errors are indicated by alternate flashing green and yellow LEDs. The sensor errors are usually self-resetting, i.e. the sensor changes automatically to the normal operating state, after the error was corrected. After switching on the operating voltage the sensor checks its operating parameters. If errors occur during the checking process, the sensor remains in the error state (green LED blinking). The output cannot be switched-on in this state. A new calibration with the teach adapter is required.

**Magnetic field sensor**  
**For detection of M6 weld nuts**  
**For Detection of Ferromagnetic Parts**  
**NIMFE-EM12/4.9L88-UP6X-H1141/S1182**

**Accessories**

| Type code | Ident no. | Description   |   |
|-----------|-----------|---------------|---|
| VB2-SP1   | A3501-29  | Teach adapter |  |